


WT5+RS2

WiFi & RF Dual Color LED Controller Set

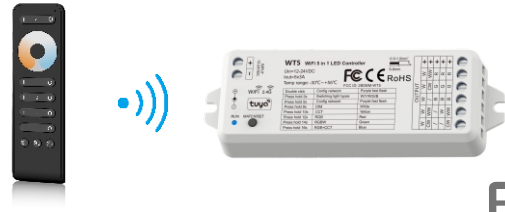

FC CE RoHS

- WiFi & RF 5 in 1 controller , touch wheel RF remote + Tuya smart APP cloud control.
- Tuya smart APP cloud control, support on/off, RGB color, color temperature and brightness adjust, delay turn on/off light, timer run, scene edit and music play function.
- RS2 remote control configuration with ultra sensitive dual color adjustment touch wheel, support to magnet on the back which can be stuck on back holder.
- Voice control, support for Amazon Alexa, Google Assistant, Tmall Genie and Xiaodu voice assistant.
- Each WT5 controller can also work as WiFi+RF converter, then use Tuya smart APP to control one or more RF LED controller or RF LED dimming driver synchronously.
- User need set light type by press WT5's key before Tuya smart APP network connection and match RF remote of the same light type.
- Light on/off fade time 3s selectable.

Technical Parameters

LED Remote	
Output signal	RF(2.4GHz)
Work voltage	3VDC(AAAx2)
Work current	<5mA
Standby current	< 10 μ A
Standby time	1 year
Remote distance	30m(Barrier-free space)
Size	L155xW43xH17.5mm

Dimming data	
Input signal	WiFi + RF 2.4GHz
Control distance	30m(Barrier-free space)
Dimming gray scale	4096 (2 ¹²) levels
Dimming range	0 -100%
Dimming curve	Logarithmic
PWM frequency	1000Hz (default)

Safety and EMC	
EMC standard	EN IEC 55015/EN IEC 61547 ETSI EN 301 489-1/-3/-17
Safety standard	EN 61347-1/-2
Radio Equipment	ETSI EN 300 440 ETSI EN 300 328
Certification	CE RoHS FCC

LED Controller	
Input voltage	12-24VDC
Input Current	1.5.5A
Output voltage	5 x (12-24)VDC
Output current	5CH,3A/CH
Output power	5 x [36-72]W
Output type	Constant voltage
Size	L114xW38xH20mm

Environment	
Operation temperature	Ta: -30 °C ~ +55 °C
Case temperature (Max.)	Tc: +85 °C



Package	
Size	L160xW91xH28mm
Gross weight	0.214Kg

Warranty	
Warranty	5 years



WiFi+RF

Mechanical Structures and Installations

Controller:

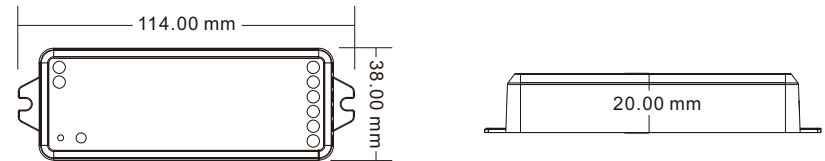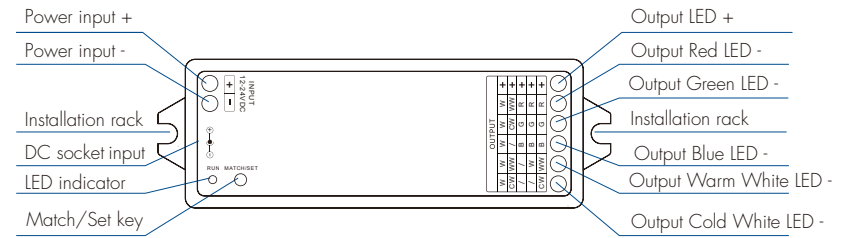

Remote:

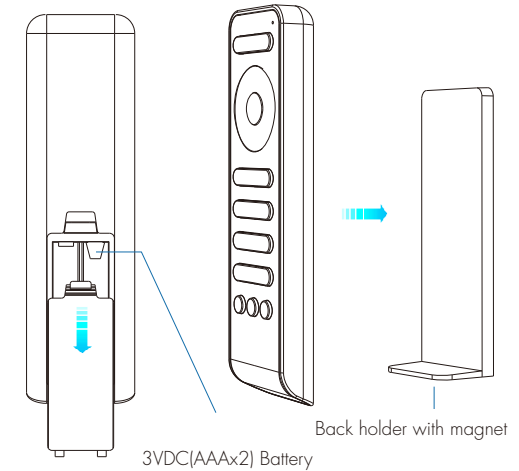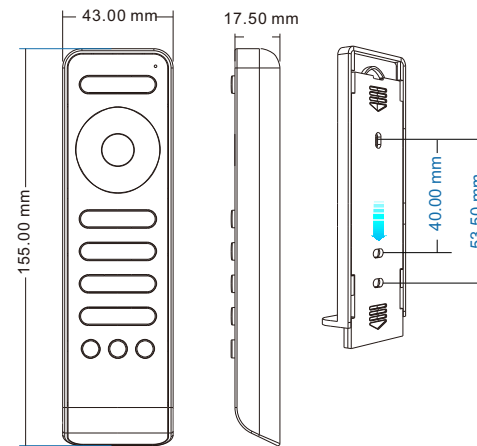


To fix the remote, three options are offered for selection:

- Option 1: can be adsorbed directly onto metal surfaces.
- Option 2: fix the remote' back holder on the wall with two screws.
- Option 3: adhere the remote' back holder to the wall with pastar.

Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

Wiring Diagram

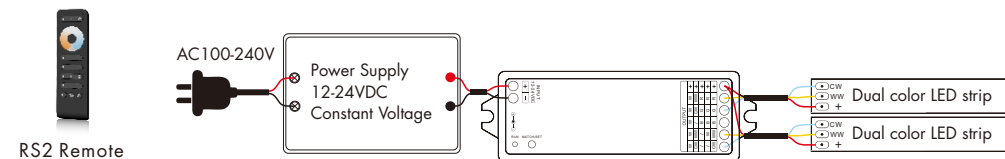

Press and hold match/set key for 10s, until the RUN LED indicator turn yellow, then release, the controller will become CCT type, then do smart config by Tuya smart APP, or short press match key to match with CCT RF remote.

Note:

1. User can connect constant voltage power supply or power adapter as power input.
2. Press and hold Match/Set key for 2s, switch 5 kinds light type in sequence.
3. For RGB+CCT or CCT light type, continuous power on and off will change 3 levels color temperature (WW, NW and CW) in sequence.
4. Switch off the power, then switch on power, repeat again.
Immediately short press match key 3 times, the light on/off time will change between 3s and 0.5s.

Remote Key Function



Match RS2Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the WT5's Match key

Match:
Short press match key of WT5, immediately press on/off key (single zone remote) or zone key (multiple zone remote) on the RS2 remote. The LED indicator fast flash a few times means match is successful.

Delete:
Press and hold match key of WT5 for 20s, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:
Switch off the power of WT5, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the RS2 remote. The light blinks 3 times means match is successful.

Delete:
Switch off the power of WT5, then switch on power, repeat again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

WT5 Work as WiFi-RF Converter to Match RF LED Controller or Dimming Driver

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:
Short press match key of the controller, immediately press on/off key on the Tuya smart APP. The LED indicator fast flash a few times means match is successful.


Delete:
Press and hold match key of the controller for 5s, The LED indicator fast flash a few times means match was deleted.

Use Power Restart

Match:
Switch off the power of the controller, then switch on power, repeat again. immediately short press on/off key 3 times on the Tuya smart APP. The light blinks 3 times means match is successful.

Delete:
Switch off the power of the controller, then switch on power, repeat again. immediately short press on/off key 5 times on the Tuya smart APP. The light blinks 5 times means match was deleted.

System Wiring

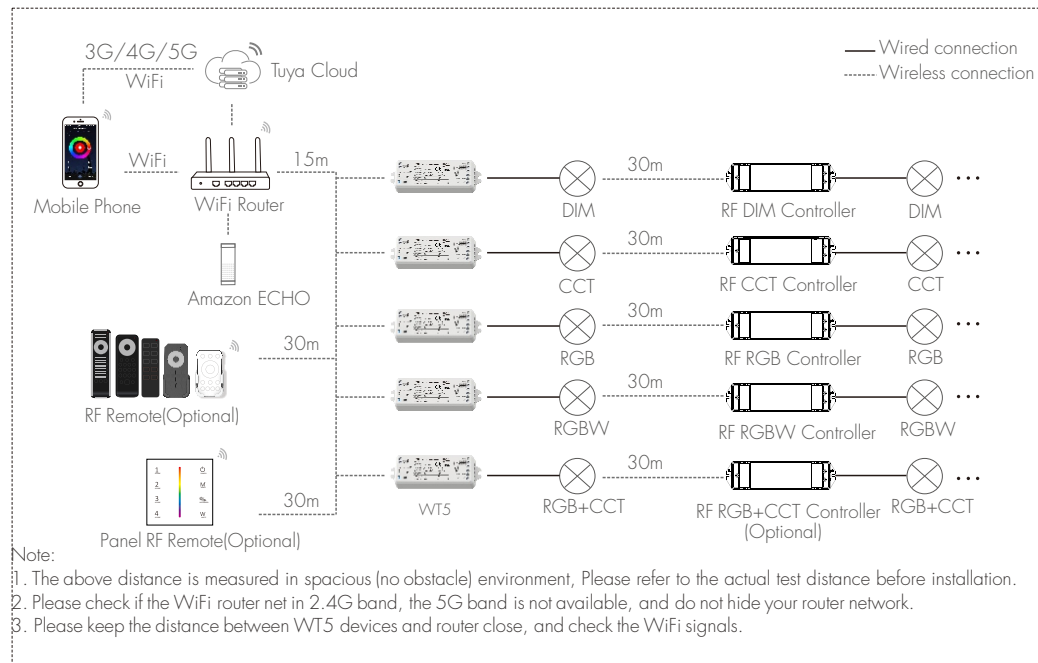

Tuya Smart APP Network Connection

● Download and open APP

Search for "Tuya Smart/Smart Life APP" in the app store, or scan the QR code on the right to download the APP. Register and login after installation.

● APP Pairing Network

Push twice Match/Set key fastly, or when press and hold Match/Set key for 8-16s to set 5 kinds light type:

Clear previous network connection, enter WiFi config mode, the LED indicator flash fastly, the output LED will flash 10 times.

Press and hold Match/Set key for 2s:

Switch 5 kinds light type in sequence, notice this operation does not automatically clear previous network connection.

Press and hold Match/Set key for 5s:

Clear previous network connection, enter WiFi config mode, the LED indicator flash fastly.

Repeat power on and off for 5 consecutive times, also clear previous network connection, enter WiFi config mode, the output LED will flash 10 times.


If Tuya Smart APP network connection succeed, the RUN LED indicator will stop flash, and turn corresponding light type color (White: DIM, Yellow: CCT, Red: RGB, Green: RGBW, Blue: RGB+CCT). and in Tuya Smart APP, you can find RGB+CCT device (or other DIM, CCT, RGB or RGBW).

When controlling the light with Tuya Smart/Smart Life APP, if the network connection is poor, you can control the light with Bluetooth connection within the Bluetooth control range.

Note: The light can not be directly controlled by Bluetooth without WiFi configuration.



Tuya Smart APP Interface

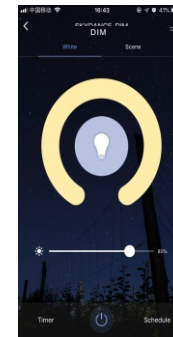

White interface

For DIM type:


Touch brightness slide to adjust brightness.

For RGB type:

Touch brightness slide, get RGB mixed white firstly, then to adjust white brightness.

For RGBW type:

Touch brightness slide, adjust white channel brightness.

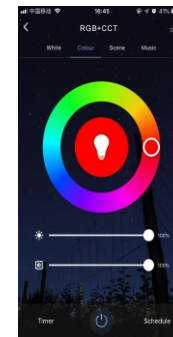

Colour interface

For RGB or RGBW type:

Touch color wheel to adjust static RGB color.

Touch brightness slide to adjust color brightness.


Touch saturation slide to adjust color saturation, namely gradient from the current color to white (RGB mixed).

For RGB+CCT type:

Touch color wheel to adjust static RGB color, WW/CW will turn off automatically.

Touch brightness slide to adjust color brightness.

Touch saturation slide to adjust color saturation, namely gradient from the current color to white (RGB mixed).

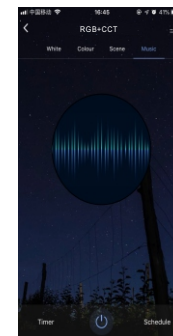


Music, Timer, Schedule

The music play can use smart phone music player or micro-phone as music signal input.

The Timer key can turn on or turn off light in the next 24 hours.

The Schedule key can add multiple timers to turn on or turn off light according to different time periods.

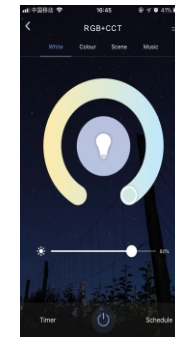

Color temperature interface

For CCT type:

Touch color wheel to adjust color temperature.


Touch brightness slide to adjust brightness.

For RGB+CCT type:

Touch color wheel to adjust color temperature,

RGB will turn off automatically.

Touch brightness slide to adjust white brightness.

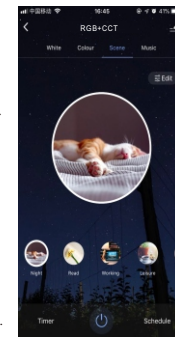

Scene interface

The 1-4 scene is static color for all light type. The inner color of these scene can be editable.

The 5-8 scene is dynamic mode for RGB, RGBW, RGB+CCT type, such as green fade in and fade out, RGB jump, 6 color jump, 6 color smooth.

Installation Precautions

1. The products shall not be stacked, the distance should be $\geq 20\text{cm}$, so as not to affect lifespan of the products due to poor heat dissipation.
2. The product shall not be installed close to the switching power supply with an interval of $\geq 20\text{cm}$ to avoid radiation interference of the switching power supply.
3. The installation height shall be $\geq 1\text{m}$ from the floor to avoid shortening the remote control distance due to too weak reception signal.
4. The products are not allowed to be close to or covered by metal objects, with an interval of $\geq 20\text{cm}$ to avoid signal attenuation and shorten the remote distance.
5. Avoid installation at the corner of the wall or the corner of the beam, with an interval of $\geq 20\text{cm}$ to avoid signal interference.

Statement

FCC ID Statement:

Mobile

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.