


Remote Control Setting

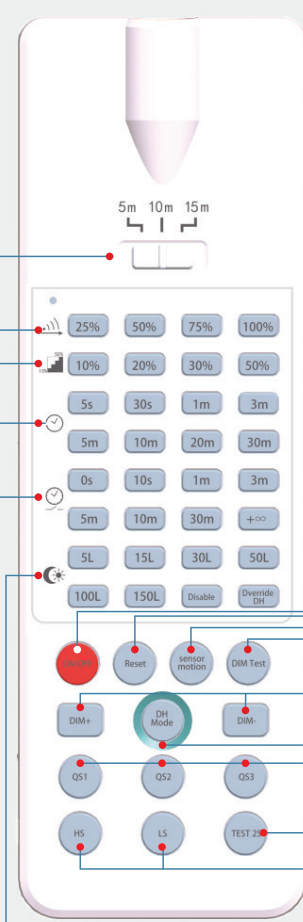

Button

ON/OFF

Reset

Sensor motion

DIM Test

DIM + DIM -

DH Mode

Q1 Q2 Q3

TEST 2S

HS LS

Daylight Sensor

Stand-by period

Hold time

Stand-by dim level

Detection Area

Remote Distance

Remarks

Press the "ON/OFF" button, the light goes to constant on/off mode, sensor is disabled. Press Reset or Sensor motion button to quit from this mode and sensor will start to work

Press "Reset" button, all parameters are same as factory settings.

Press "Sensor motion" button, the light quits from the constant on/ off mode, and the sensor starts to work (The latest setting stays invalid)

Press "DIM Test" button, the 1-10 V dimming works to test whether the 1-10Vdc dimming ports are connected properly. After 2s, it returns to the latest setting automatically.

Short press "DIM+ / DIM-" button to transmit dimming signal. The brightness of the lamp adjusts at 5% per unit. (only apply for sensor with daylight harvesting function)

Long press >3s, sensor will take current light level as target lux level, to dim up/down load automatically according to the change of ambient light level. (only apply for sensor with daylight harvesting function)

Scene Options	Detection Area	Hold Time	Stand-by period	Stand-by dim level	Daylight Sensor	Induction model
QS1	100%	30S	1min	10%	5Lux	Hs
QS2	100%	1min	3min	10%	10Lux	Hs
QS3	100%	5min	10min	10%	30Lux	Hs

Note: Detection area / Hold time / Stand-by period / Stand-by dim level / Daylight sensor can be adjusted by pressing the corresponding button. The latest setting will stay valid.

Press the "TEST 2S" button can enter the test mode anytime. At the mode, the sensor parameters are as below: Detection Area is 100%, Hold Time is 2s, Stand-by Dim Level is 10%, Stand-by Period is 0s, daylight sensor disable. This function only for testing. Quit the mode by pressing "RESET" or any other function buttons.

Press "HS" button to set the detection area to be high sensitive. Press "LS" button to set the detection area to be low sensitive. The adjustment based on the "Detection Area" parameter you set.

Daylight Sensor
Set up daylight threshold: 5Lux/15Lux/30Lux/50Lux/100Lux/150Lux/ Disable

Stand-by period
Set up stand-by time: 0S/10S/1min/3min/5min/10min/30min/+∞

Hold time
Set up hold time: 5S/30S/1min/3min/5min/10min/20min/30min

Stand-by dim level
Set up stand-by dim level: 10%/20%/30%/50%

Detection Area
Set up detection area: 25%/50%/75%/100%

Remote Distance
Toggle button can set the distance between the remote control and sensor.

Note: False triggering can occur when a fitting/sensor is installed too close to a large solid object i.e. wall. If this happens reduce the detection area sensitivity/percentage to resolve this. It is recommended by the manufacturer that this product is installed a minimum of 1 Metre away from any solid object i.e. wall/steel work or glass.

Recommended distance setting for programming at different heights

